




Installation instructions i4F HerringB/ONE

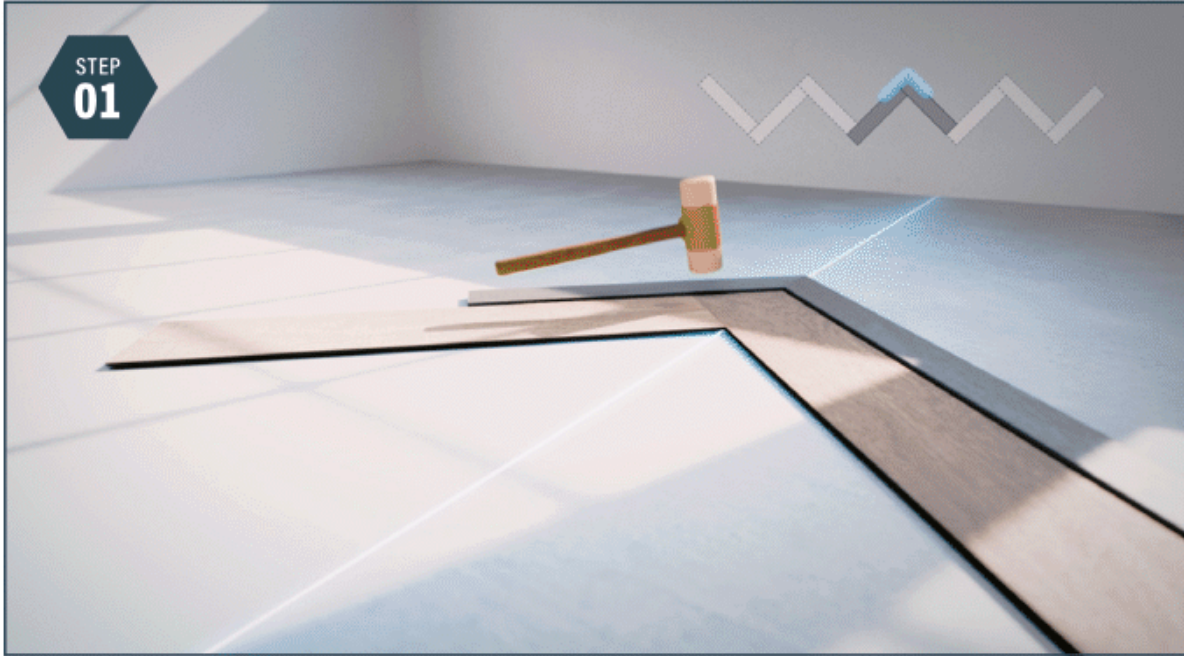

- Firstly, measure the room and mark out where the middle is;
- Position the T-square's top angle on the middle line then align the tips of 2 panels and click into place;
- Tap gently with PVC mallet to lock. **Make sure that the groove side of the plank is always facing inwards.**

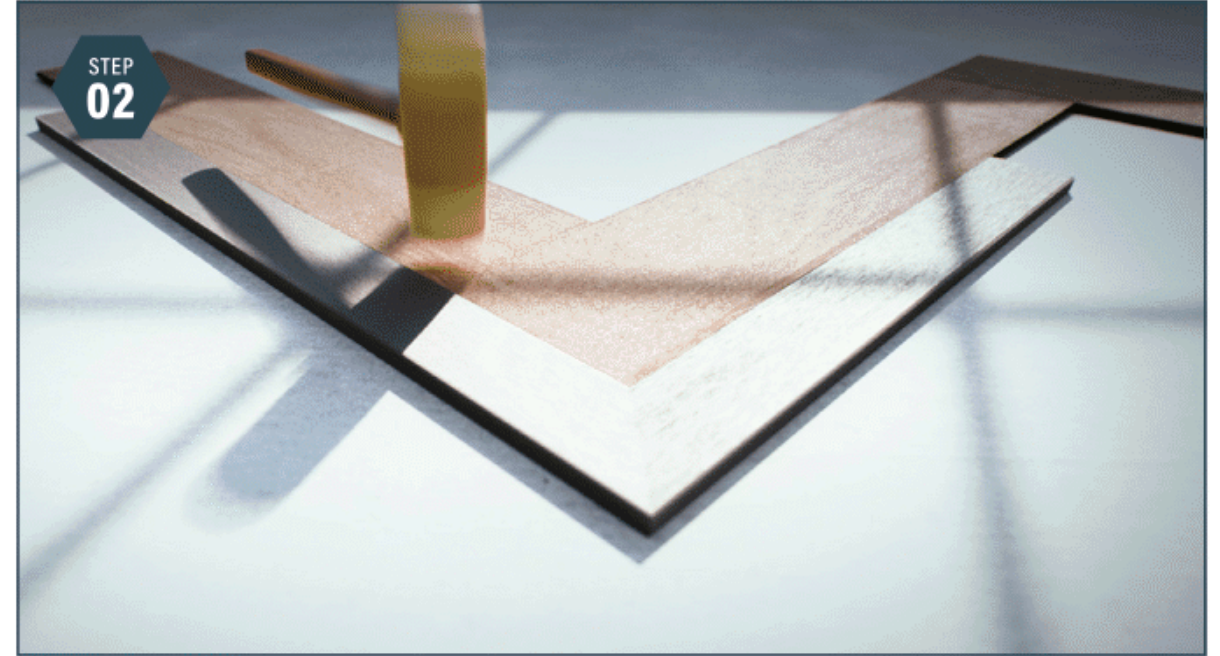


- Continue to install panels outwards on each side across the width of the room;
- Always use the T-square, only moving it once you have locking in the panels;
- All i4F herringB/ONE panels fit each other, so no need to worry about alternating boards.

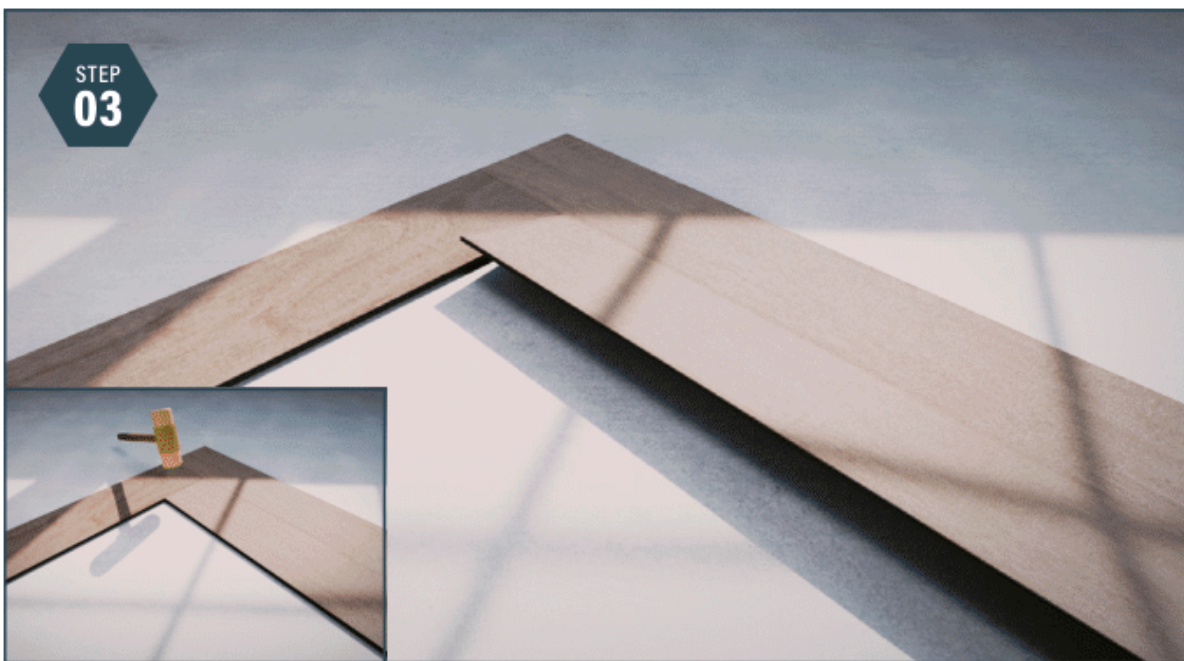

Install the second row

- Angle in the long side of the board and slide across to the short side. Drop the short side and lock by using the PVC mallet.

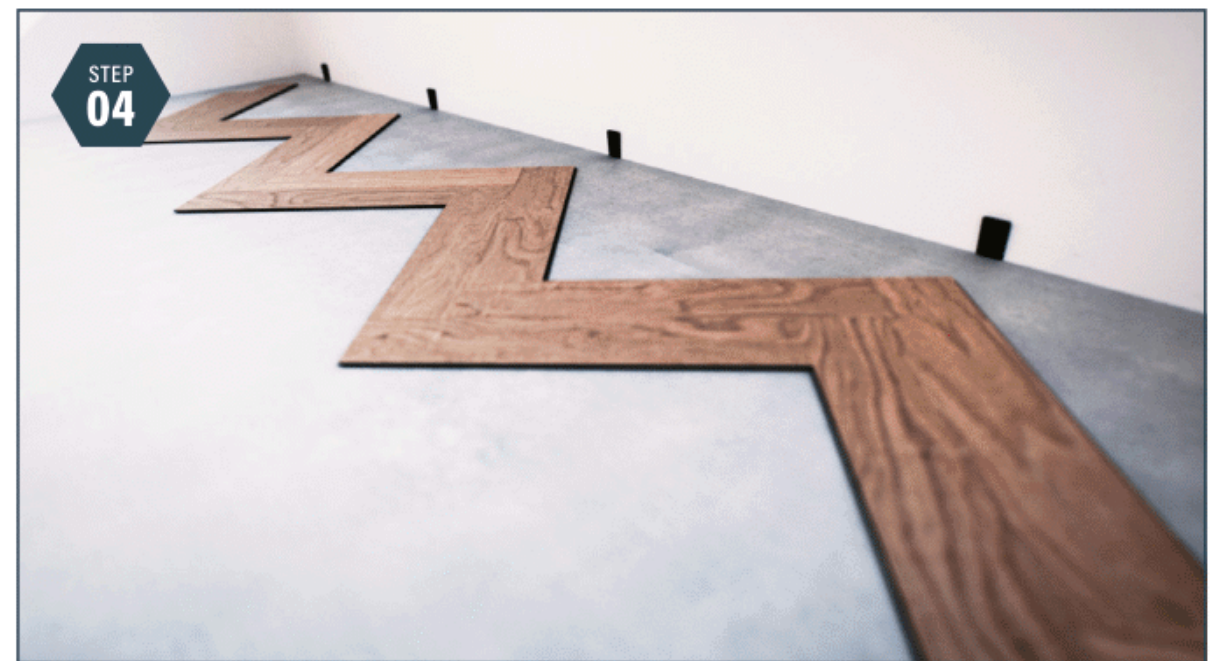

- Gently slide the 2 rows to the wall: add spacers in between each tip and the wall;
- Measure the distance from the end panel to the wall minus 5mm (0.2inch).



- Prepare the end panels on each side. Use a 45° square to cut the panel and remove the excess.



- Continue installing and lock in all remaining panels.



- Measure and cut to size panels and fill up empty triangle spaces at the end of the room;
- Remove spacers after installation;
- Install baseboards/plinths to finish the room.



Disassembling

- Place the disassembling wedge under the plank to be disengaged;
- Gently tap the adjacent plank with the PVC mallet. Slowly lift the plank upwards to loosen it.