


Installation Instructions

Engaging 3L TripleLock and Click4U using a rubber mallet




PATENTS & TECHNOLOGIES

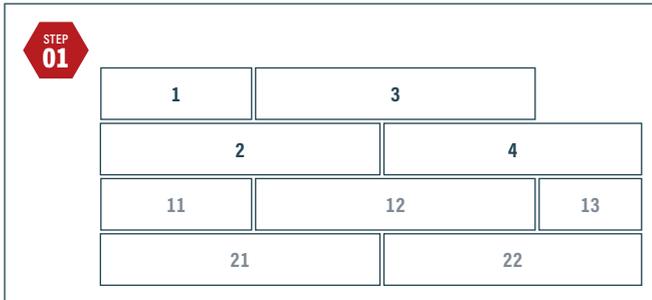

STEP 01

ESTABLISH STAGGER AND ALIGN TOOLS


Products should be staggered in bricklaid pattern, stagger equal to half of a plank. Tools needed: planks, underlayment, spacers, rubber mallet, cutter.

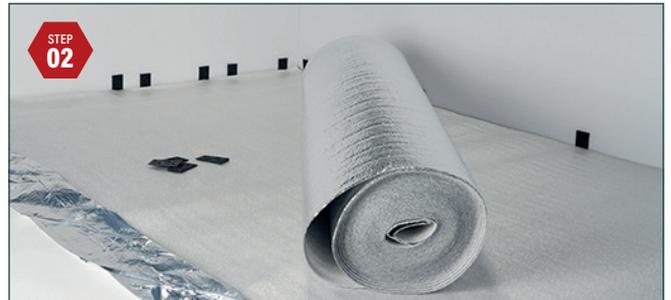

STEP 02

PREPARE FLOOR

In case of an uneven floor, place underlayment. Set spacers of equal thickness, appropriately distanced, for the required expansion gap.

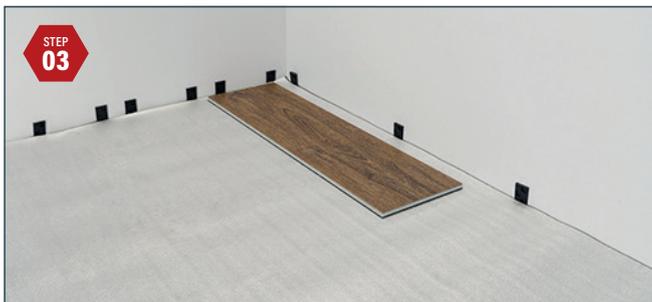

STEP 03

INSTALL 1ST PLANK

It is very important that the first row is installed straightly. To realize this, installation alternates back and forth between rows one and two, for the first two rows only. Start with a small plank (1) and position this plank close to the wall.



STEP 04

INSTALL 2ND PLANK


Now select a long plank (2). Using the **Click4U** angle system, angle the long side of plank 2 on to the long side of plank 1. Drop plank 2 to lock. Make sure there are no gaps.



STEP 05

ENGAGE 3RD PLANK ON LONG SIDE

Take another long plank (3). Repeating the previous step, insert the long side of plank 3 into the long side of plank 2. Then slide plank 3 to your left until the short side is in contact with the short side of plank 1.

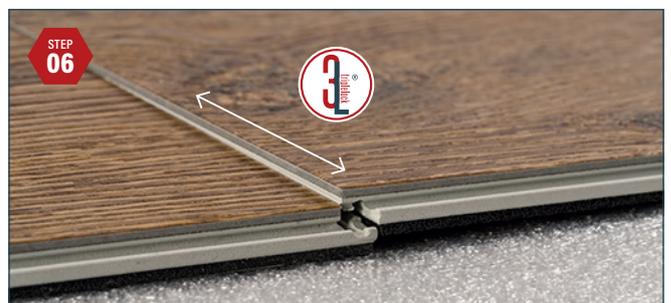

STEP 06

ENGAGE 3RD PLANK ON SHORT SIDE (Part I)

Using the **3L TripleLock** one piece drop-lock system, drop the short side of plank 3 onto the short side of plank 1.

Installation Instructions

Engaging 3L TripleLock and Click4U using a rubber mallet



STEP 07 ENGAGE 3RD PLANK ON SHORT SIDE (Part II)

Using a rubber mallet slightly tap the joints on the short side to secure. This ensures 3x locking.



STEP 08 FINISH ROWS 1 AND 2

Continue alternating planks on rows 1 and 2 to avoid misalignment. From row 3 onwards, installation does not require alternating rows. Install one row after the other by starting with angling on the long side, sliding until the short sides are in contact and then locking the short side.



STEP 09 SECURING PLANKS

As you go, don't forget to use a rubber mallet on the short sides to secure the locking.



STEP 10 FINALIZE FLOOR

Finished? Remove spacers and cover gaps with a trim.



STEP 11 DISASSEMBLING THE LONG SIDE

Lift up the entire row in the same angle as you did during installation, then slide the rows apart.



STEP 12 DISASSEMBLING THE SHORT SIDE

Disassemble the row by sliding apart the planks on the short side.